



Control Knob Fitment Instructions

When fitting the Control Knob to the Control Valve Shaft ensure the flat moulded section of the knob is located onto the flat section of the control valve shaft, not the brass pressure spring. The brass pressure spring is to be located onto the radius section of the Control Valve Shaft.

Flat section of Control Valve Shaft




Flat section of Control Knob

Brass pressure spring of Control Knob.

Radius section of Control Valve Shaft

For correct function of the control valve it is important that the control knob has been attached correctly and has not sustained any damage by being pushed onto the shaft too far. This damage can occur during storage.

The correct gap for the control knob is as shown below. If the control knob is pushed on to far it can bind onto the side of the BBQ and stop the control valve from conducting a full activation.

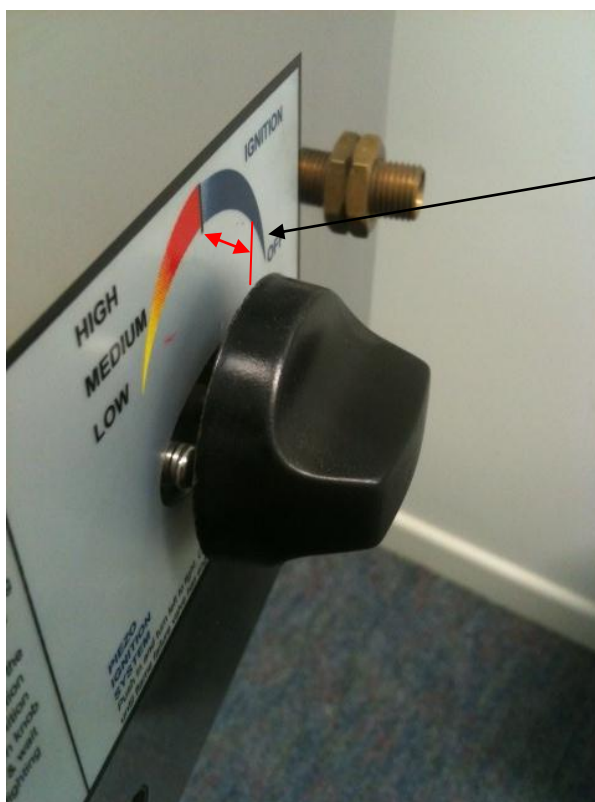

5mm gap when not compressed



2.5mm gap when compressed